


SUBJECT: Illustration of Full vs. Empty Universal Cartridge


Full Cartridge

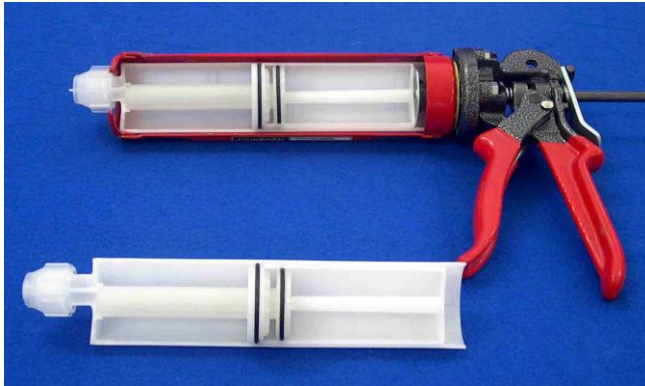

This picture illustrates a full universal cartridge. The plunger/rod of the caulking gun is fully extended.

One product component is located in the top of the cartridge and the other in the bottom.

Empty Cartridge

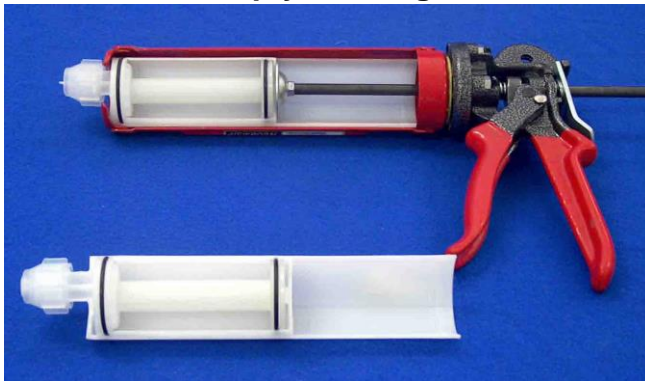

This picture illustrates an empty universal cartridge. The plunger/rod of the caulking gun is now half way into the barrel of the caulking gun (approximately 3-4"). Half of the plunger rod will still be extended from the gun. Do not force the trigger to apply more product. Damage to the gun or cartridge may occur.

In this position **all of the product** has been emptied from the cartridge.