

SUBJECT: Putty Pusher Valves: Cracking

There is a potential problem that could occur with the disposable valve cracking on the #100171 Putty Pusher dispenser pail when the valve is improperly installed.

To correctly mount the valve, it is important to first turn the pail upside down then unscrew the cap and remove the seal. Next, screw the valve on by hand **before** the valve gate is installed then **gently** work the valve gate into the slot.

NOTE: Some valves may be tighter than others and forcing the valve gate through could cause the valve to crack or stretch out of shape which may cause leaking.

Once the valve gate is installed, if it needs adjusting to face it in the right direction **do not use the valve gate as leverage** to turn the valve as this could cause it to crack.

When the valve is completely installed turn the pail over and mount it into the dispenser.

