

EVERCOAT®

EVERCOAT®

QUANTUM 1™

BEST PRACTICES



EVERCOAT®

EVERCOAT®

BEST PRACTICES

QUANTUM1™ 10:1 FILLER

SMALL repairs

LARGE repairs

1: CLEAN

Clean and degrease the body panel to be repaired.

2: STRAIGHTEN PANEL

Straighten the panel to be repaired as needed.

3: PAINT REMOVAL

Remove paint with 80 grit in the area to be filled.

4: PREPARATION

Sand and featheredge the area with 80 grit to remove only the clear coat and base coat, then remove sanding dust with clean compressed air.

5: APPLY

Apply Evercoat Quantum1 to repair area with firm even pressure in a thin coat, then apply additional material as needed.

6: SAND

Sand to shape with 180 grit.
For best results final sand with 180 grit using a DA Sander to remove straight line sand scratches.

7: REMOVE SANDING DUST AND INSPECT

Remove the sanding dust with clean compressed air and inspect area for coarse sand scratches or imperfections.

Quantum1™ provides a surface that sands easier than any 10:1 filler you've ever used. Our patented technology allows your shop to repair more vehicles in less time using less putty and less sandpaper.



QUANTUM1™ SMALL REPAIR

- #491 SUPER FAST 825mL
- #492 FAST 825mL
- #494 SLOW 825mL
- #476 1/2 GALLON



- SMALLER TO MEDIUM REPAIRS.
- HORIZONTAL APPLICATIONS
- FLAT TO SLIGHT CONTOUR



QUANTUM1™ LARGE REPAIR

- #490 1/2-GALLON
- #495 GALLON
- #497 3-GALLON PAIL



- MEDIUM TO LARGE REPAIRS.
- VERTICAL APPLICATIONS
- CONTOUR PANELS AND BODY LINE REPAIRS

FAST catalyst



#455 CATALYST

SMALL QUICK REPAIRS AND LOWER TEMPERATURES

MEDIUM catalyst



#457 CATALYST

SMALL TO MEDIUM REPAIRS AND LOW TEMPERATURES

SLOW catalyst




#458 CATALYST

LARGE REPAIRS AND HIGH TEMPERATURES

SEE IT ON YouTube



EVERCOAT®

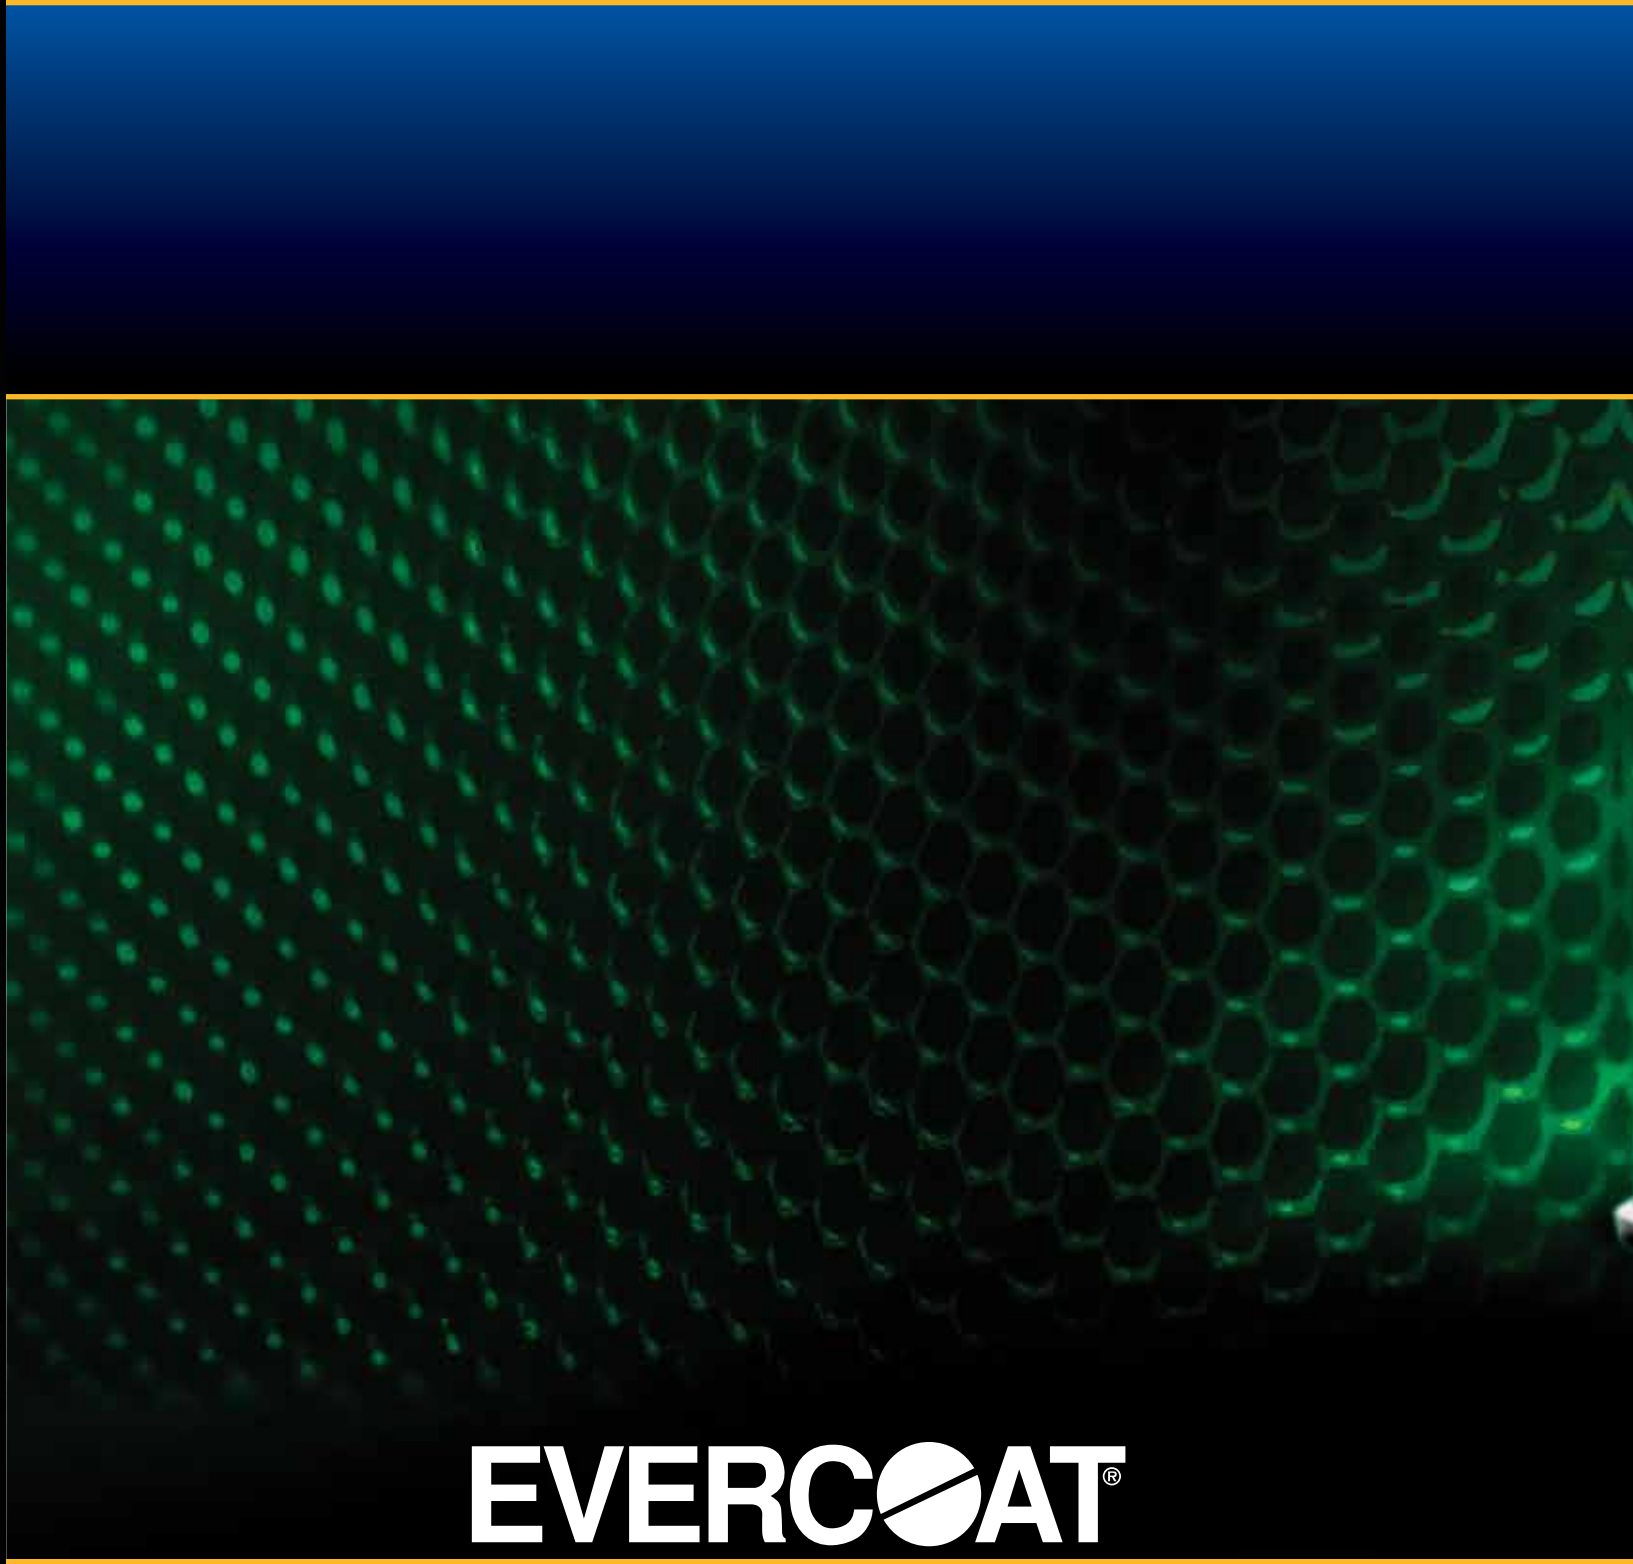

EVERCOAT®

Evercoat | a division of Illinois Tool Works Inc. | 6600 Cornell Road | Cincinnati, OH 45242 | (513) 489-7600
Made and Printed in the U.S. | ©2012 Evercoat

evercoat.com

EVERCOAT®